



2" HITCH PLUG

INSTALLATION INSTRUCTIONS

HP01, HP02

Thanks for purchasing a Reaper Off-Road hitch plug kit. Our team has worked to ensure that this product is the premium in performance, quality, and fitment. We are proud to say that this product will enhance the look and off-road performance of your vehicle. We encourage you to read through the following steps, and check the included Bill of Materials before beginning. Please follow these steps to ensure that your installation goes as planned.

Our products are specifically designed with ease of installation in mind. However, if you are uncomfortable with the following instructions please seek professional assistance. Reaper Off-Road will not be held liable for harm or injury to yourself or your vehicle during installation or use of this product.



Recommended Tool List



- Wrench set (inch)
- Hex key / Allen wrench set (inch)

R1019
V01 - 9.20.21



Visit us online:
ReaperOffRoad.com

Call Us Toll-Free:
844-868-3022

 [reaper.off.road](https://www.instagram.com/reaper.off.road)
 [Reaper-Off-Road](https://www.facebook.com/Reaper-Off-Road)


ASSEMBLY

2" HITCH PLUG

PAGE 2

This kit includes an accent plate that can be customized to the color of your choice or left as is. If you would like to paint or powder coat the plate, do so before continuing.

1. Arrange all three components in the proper order - Logo plate, backing plate, mounting plate.
2. Assemble the hardware through each bolt hole. You will use screw (A) and washer (B) through the front and washer (B) and nut (C) at the back. Align plates and hand tighten.
3. Use a 5/32" hex key and a 7/16" wrench to tighten.
4. Install the plug into your hitch receiver using a hitch pin (not included).

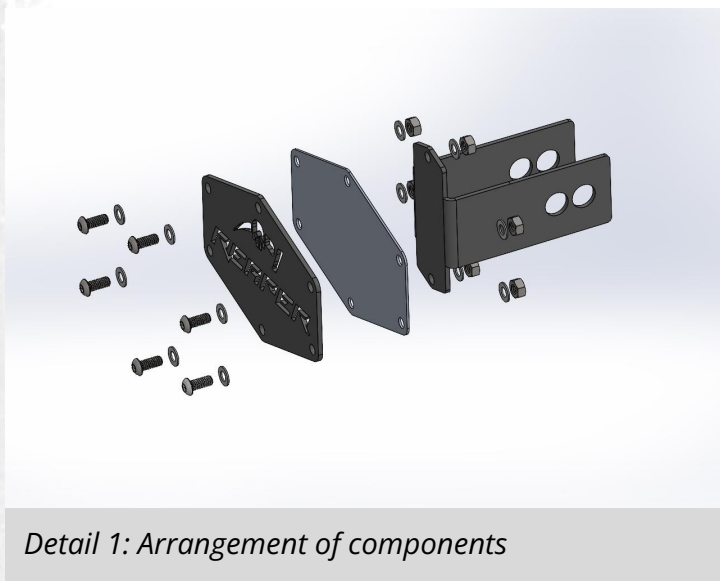

R1019
V01 - 9.20.21