



07-18 JEEP WRANGLER JK/JKU

FRONT FENDER LINER INSTALLATION INSTRUCTIONS

JFL03

Thanks for purchasing a set of Reaper Off-Road front fender liners for your Wrangler JK. Our team has worked to ensure that this product is the premium in performance, quality, and fitment. We are proud to say that this product will enhance the look and off-road performance of your vehicle. We encourage you to read through the following steps, and check the included Bill of Materials before beginning. Please follow these steps to ensure that your installation goes as planned.

Our products are specifically designed with ease of installation in mind. However, if you are uncomfortable with the following instructions please seek professional assistance. Reaper Off-Road will not be held liable for harm or injury to yourself or your vehicle during installation or use of this product.

Recommended Tool List

- Plastic rivet removal tool
- Metric socket set
- Inch socket set
- Ratchet
- Hex key / Allen wrench set
- Drill/driver
- Drill - socket adapter or $\frac{3}{8}$ " nut driver bit





R1015
V01 - 2.26.21



Visit us online:
ReaperOffRoad.com

Call Us Toll-Free:
844-868-3022

 [reaper.off.road](https://www.instagram.com/reaper.off.road)
 [Reaper-Off-Road](https://www.facebook.com/Reaper-Off-Road)

DISASSEMBLY

Steps may vary depending on trim level and optional equipment. These instructions are written based upon installation with our Reaper fender flares. Liners can be installed either before or after fender flares.

1. Use a 10mm socket to remove the (6) bolts around the front driver side fender liner. There are (5) on the passenger side.
2. Starting at the rear of the fender, gently pull the fender away from the vehicle. Work your way along the fender, pulling it free from the plastic retaining clips. A plastic rivet removal tool may help.
3. Remove any remaining clips from the vehicle.
4. Repeat the above steps to remove the OEM flare on the opposite side.
5. If you choose to do so, the metal tabs hanging out from the vehicle can be cut for a cleaner finish. Carefully cut near the base of the bracket, deburr, and spray any bare metal with paint.


ASSEMBLY

These fender liners include an accent plate that can be customized to the color of your choice or left as is. If you would like to paint or powder coat the plate, do so before continuing.

6. Install the logo backing plate to the back side of each fender liner. Use the $\frac{3}{8}$ " long $\frac{1}{4}$ " screws (B), $\frac{1}{4}$ " washers (D), and $\frac{1}{4}$ " nuts (E). Use a $\frac{5}{32}$ " hex key and a $\frac{7}{16}$ " wrench or socket to secure.
7. Position the passenger side fender liner, and install to the top 2 mounting points using (2) M6 screws (A) and washers (D) to secure. Tighten enough to pull the liner into place, but leave loose enough for adjustment.



Detail 1: Remove bolts from inside fender

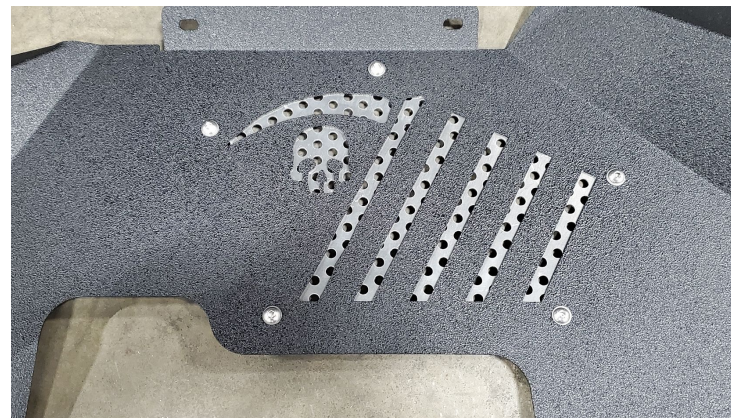

Detail 6: Install backing plate



Detail 7: Install to top mounting points

8. Secure the liner to the front mounting point using (1) M6 screw (A) and washer (D). Do not fully tighten.
9. Secure the lower front mounting point using a self-tapping screw (C). We recommend using a drill with a $\frac{3}{8}$ " nut driver or socket.
10. Secure the upper rear mounting point using a self-tapping screw (C).
11. Make any necessary adjustments and fully tighten the 5 mounting screws.
12. Repeat this process for the driver side.



Detail 8: Install to front mounting point



Detail 9: Install to lower mounting point



Detail 10: Install to rear mounting point

R1015
V01 - 2.26.21