




INSTALLATION INSTRUCTIONS FOR 15-16 F-150 2.7L AND 3.5L V6 ECOBOOST 3.5" CATBACK EXHAUST


Thanks for purchasing A Stainless Works 3.5" Catback exhaust for your 15-16 F-150 Ecoboost. We have gone to great pains to make sure that our exhaust systems fit and sound great. Please follow these steps to ensure that your installation goes as planned.

1. Stainless Works recommends the use of Hi-Temp RTV sensor safe silicon gasket maker as an option to or in conjunction with the use of factory gaskets. The recommended Oxygen Sensor Safe RTV is either Valco All-in-One Aluminum or Permatex Copper P/N 101BR available at NAPA, Autozone and other retailers.
2. Disconnect the battery before starting work on the exhaust system for your vehicle. Reconnect the battery when the job is completed.
3. Your exhaust system can be installed by a weekend warrior but the use of a lift is recommended for ease of installation. If using a jack, the vehicle must be placed on a level hard surface and jack stands are required for safety reasons.
4. You will assemble the components together as specified below, but only snug the clamps as you move along from front to back. After aligning all the components in the vehicle, you will tighten all the clamps working from front to back of the vehicle.
5. Disconnect battery.
6. Raise and support vehicle.
7. Unbolt exhaust at 2-bolt flange (2) 10 mm bolts.
8. Unbolt first hanger on exhaust (2) 8 mm bolts.
9. Remove exhaust from hangers and remove from vehicle.

10. The Catback front straight pipe in the box is 58" long and should be trimmed to length using a hacksaw on the outlet end (opposite end from welded flange) to fit different wheelbase lengths as follows:
 - a. 156.5" Wheelbase (SuperCrew with 6.5' box) – no trimming required
 - b. 144.5" Wheelbase (SuperCrew with 5.5' box, SuperCab with 6.5' box, Regular Cab with 8.0' box) – remove 11" from the end opposite the flange to make overall length = 47".
 - c. 125.9" Wheelbase (Regular Cab with 6.5' box) – remove 30.5" from the end opposite the flange to make overall length = 27.5".
11. Install the supplied donut gasket (31556) to this front pipe.
12. Install this pipe using supplied 3/8" dia. bolts and nuts: (2) 3/8" x 2-1/2" long, (4) flat washers, (2) nyloc nuts. Assemble and leave loose.
13. Install front 3-1/2" SS Accuseal clamp with wire hanger.
14. Install muffler.

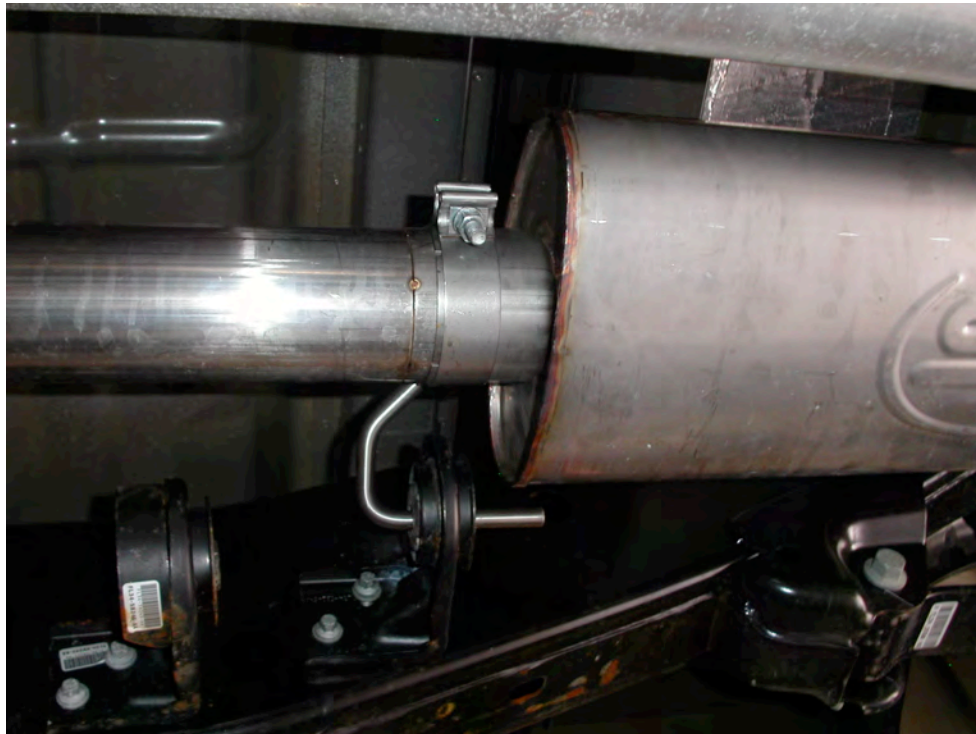

15. Install 3-1/2" SS Accuseal clamp with wire hanger.

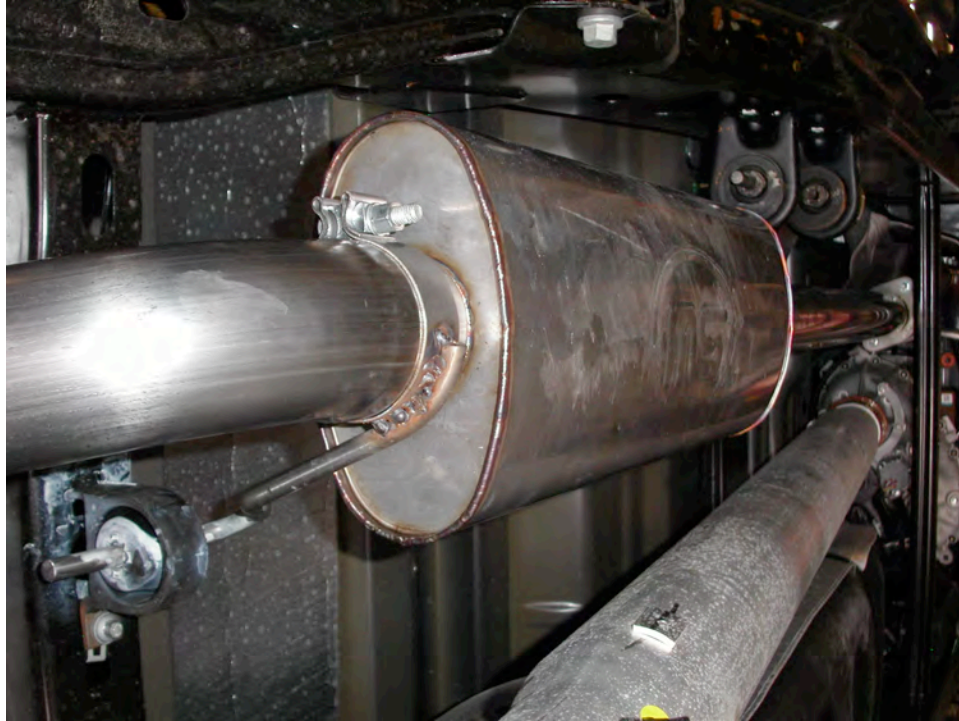

16. Install tail pipe and 3-1/2" SS Accuseal clamp with wire hanger.



17. Install tip using 3-1/2" SS Accuseal clamp.
18. Adjust exhaust for fitment and tighten all clamps.
19. Reconnect the battery.
20. Be sure to have adequate clearance around all wires, hoses and lines. **If anything is in contact with the exhaust system, it will melt.** Make sure to have at least 1/2" of clearance and wrap any suspect areas with DEI thermal barrier wrap.
21. After double checking for clearance and making sure all lines, wires and hoses are secured, drive the car for 10-20 miles and re-check all clamps and clearances. Your system may be tack welded at the joints/ clamps to reduce shifting of the system during heating and cooling cycles. Make certain to disconnect the battery before performing any welding.